

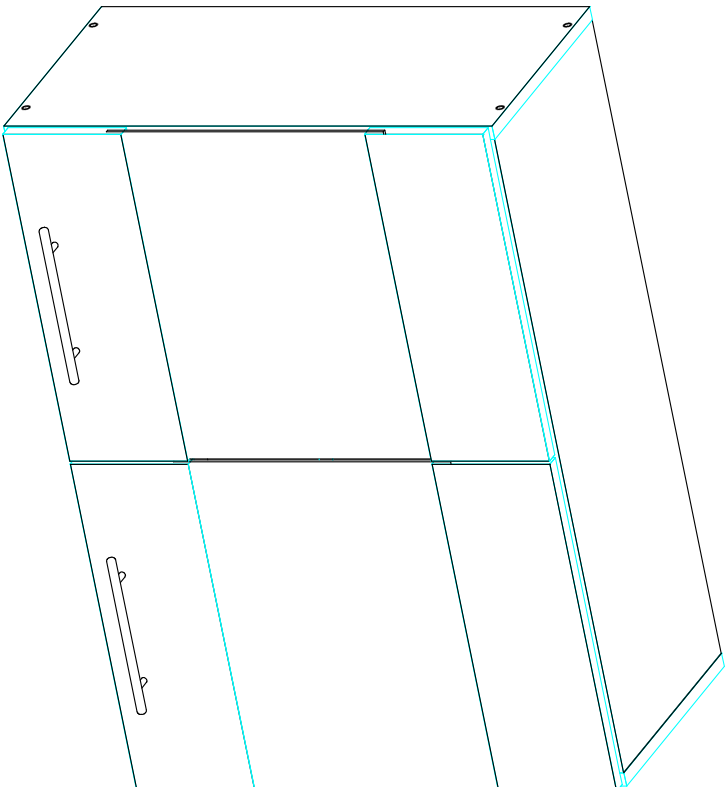
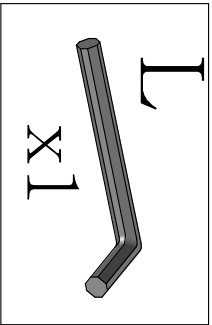
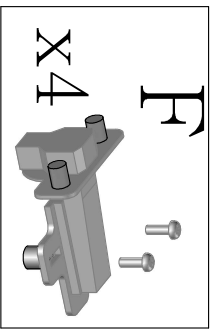
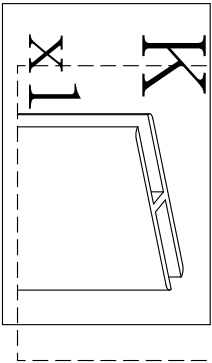
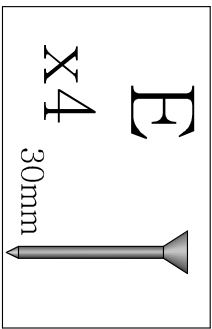
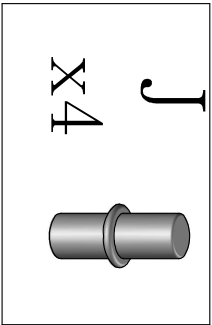
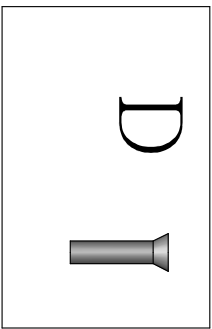
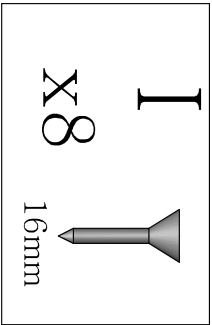
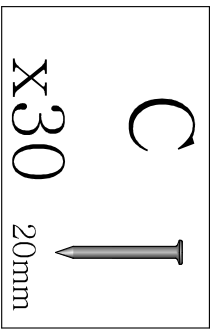
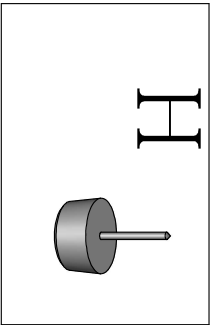
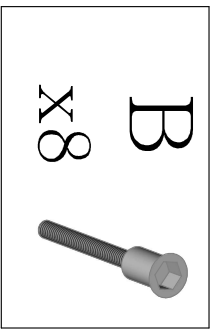
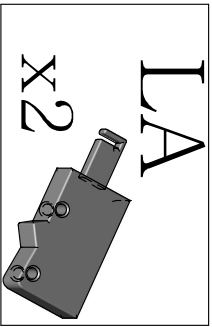


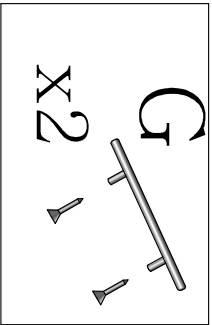

Assembly Instructions

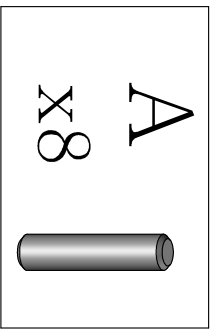

3

G80W_


External tools needed for assembly:hammer,screwdriver

Alina I


Optional tools :Power drill with screwdriver bit

240cm


Please follow steps

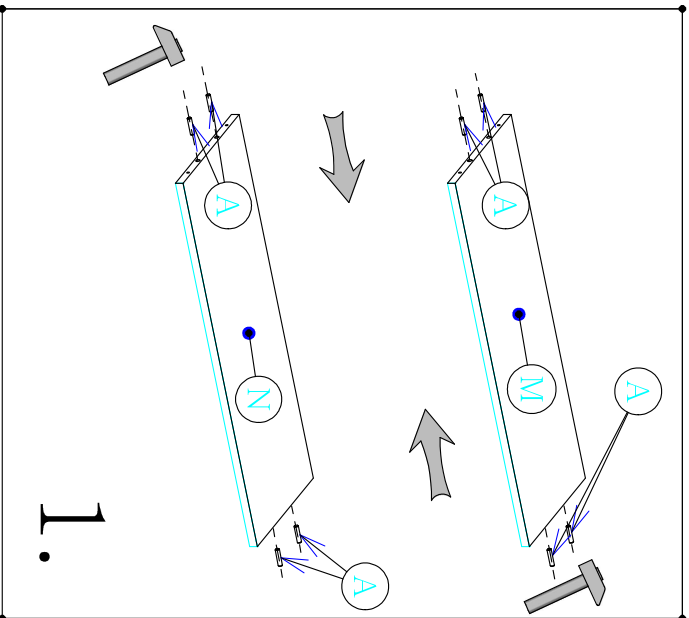


1.

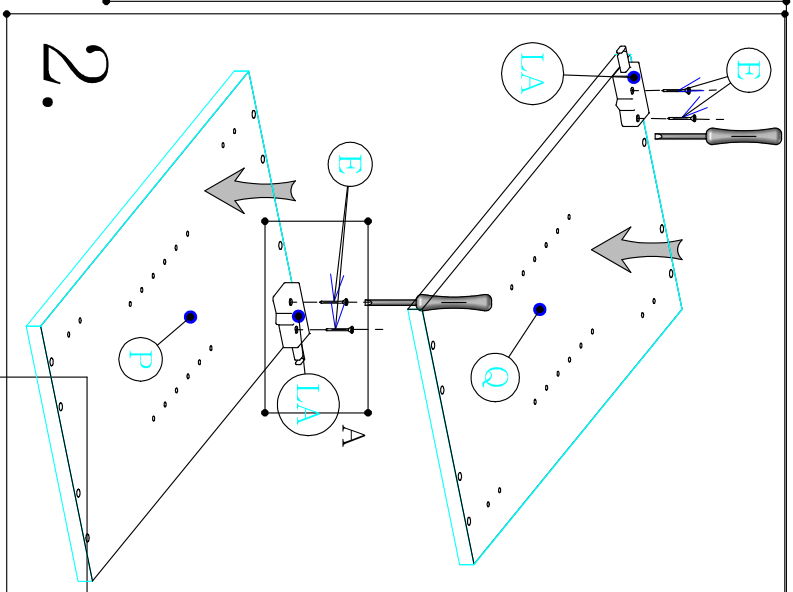


2.

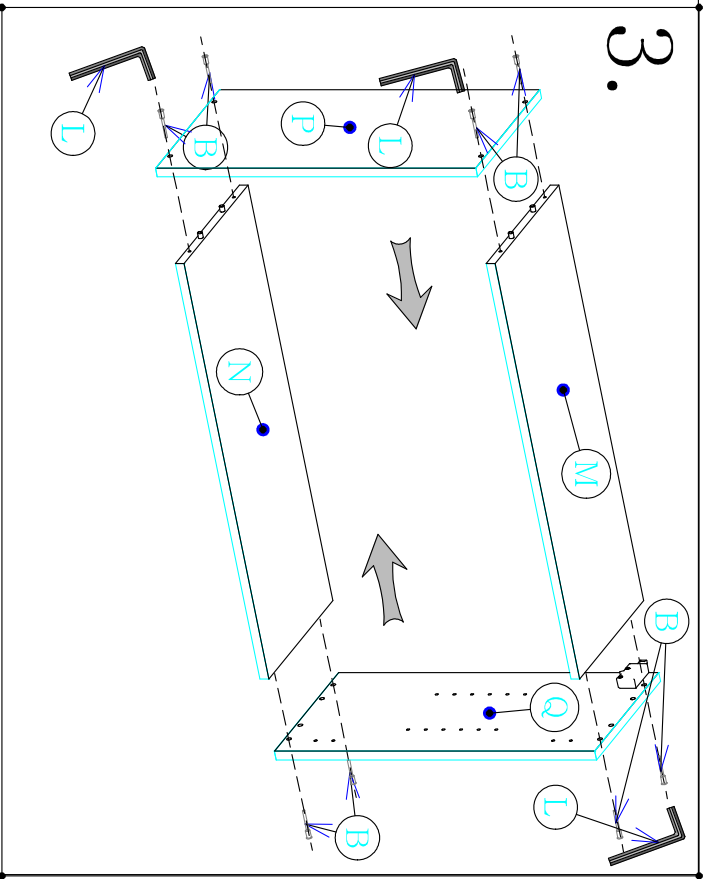

3.

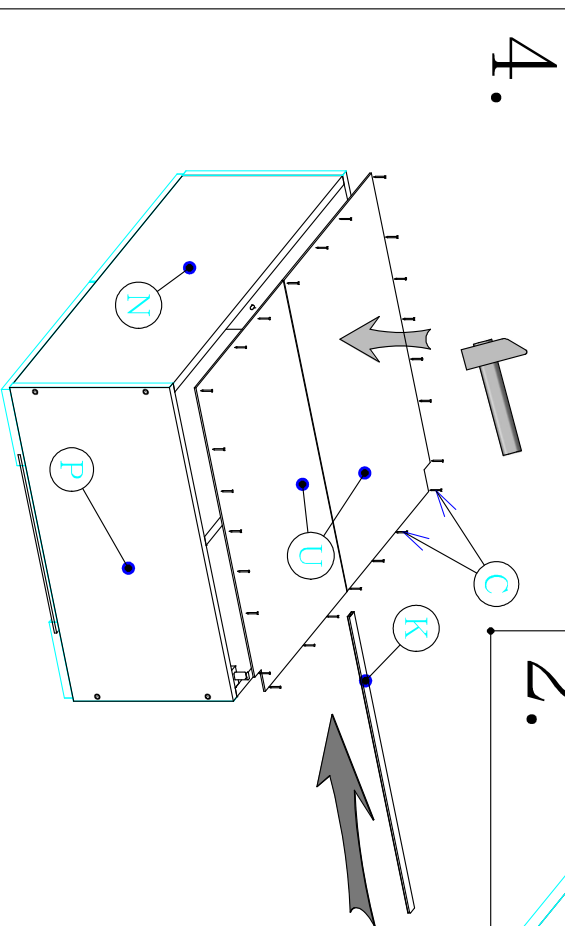

4.

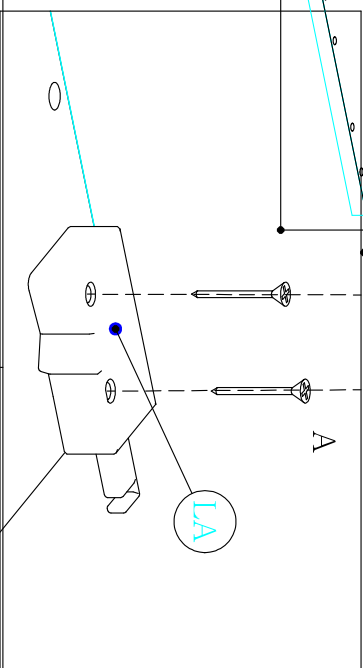

Assembly Instructions



1/2

G80-W

Alina

240cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

Assembly Instructions			2/2
G80-W	External tools needed for assembly:hammer,screwdriver		
Alina	Optional tools :Power drill with screwdriver bit		
240 cm	Please follow steps		