

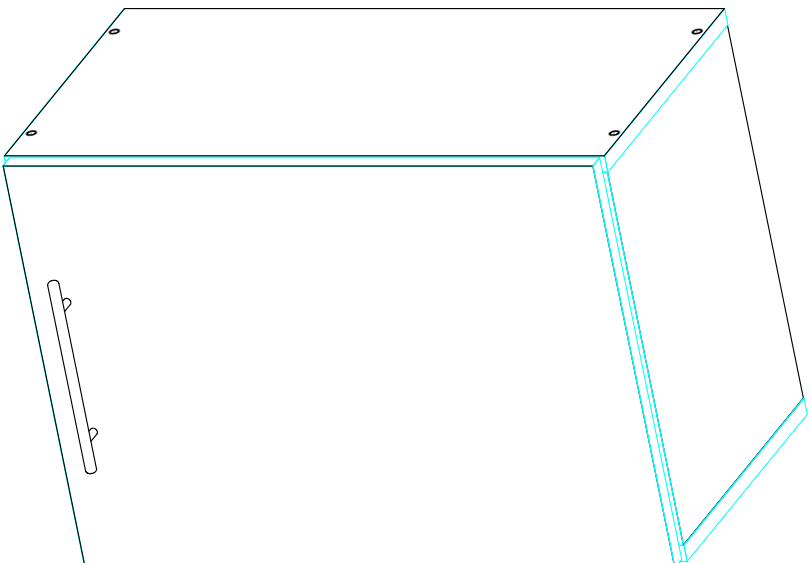
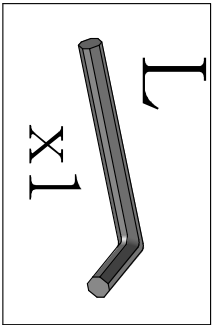
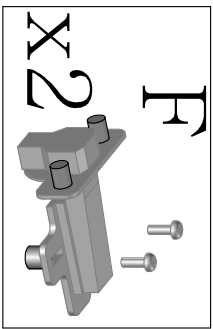
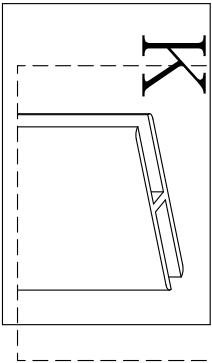
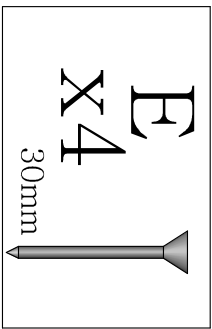
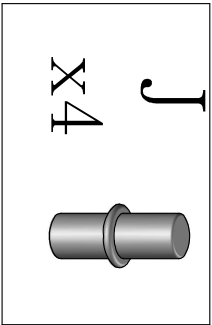
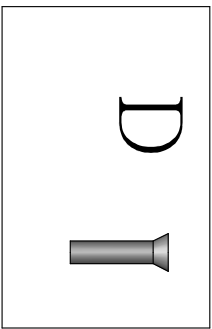
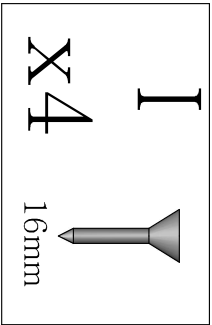
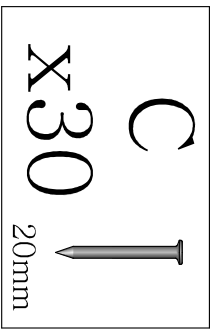
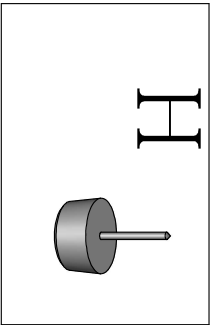
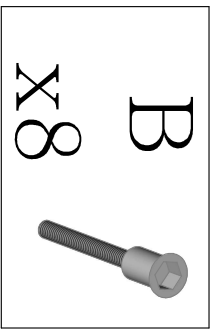
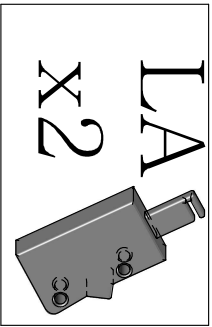


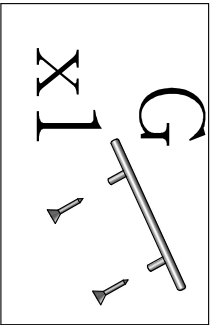

Assembly Instructions

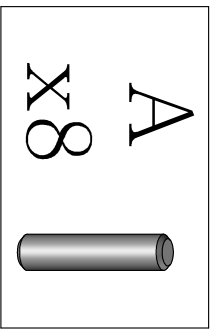

1/1

G40_1








External tools needed for assembly:hammer,screwdriver

Alina I

Optional tools :Power drill with screwdriver bit

240cm

Please follow steps

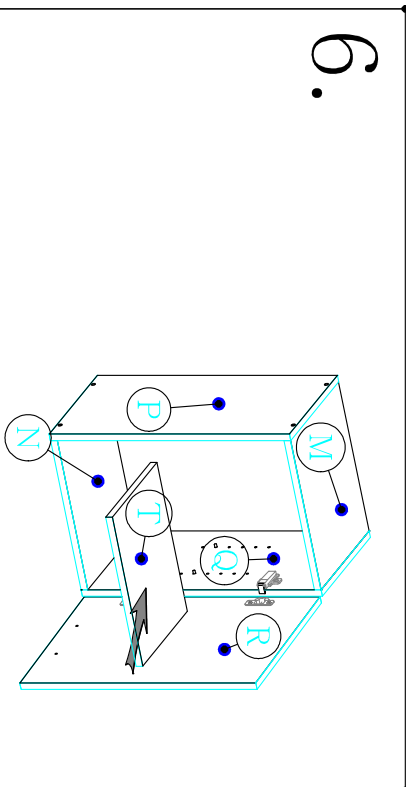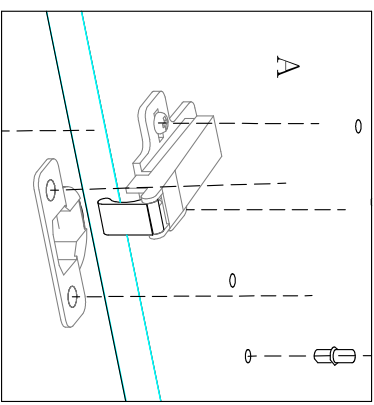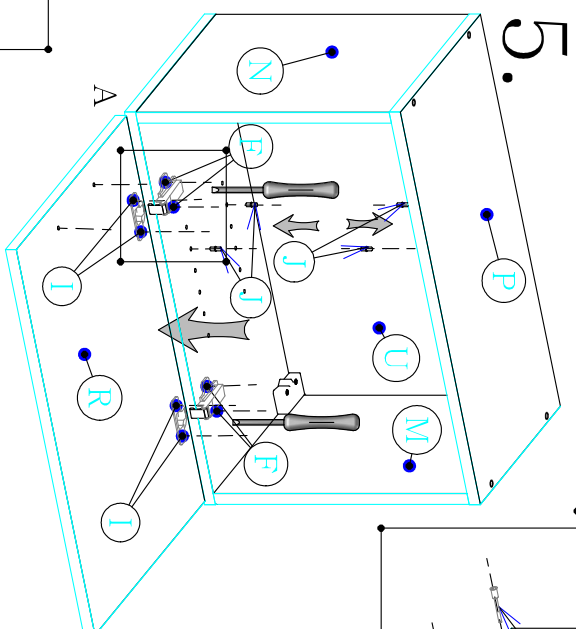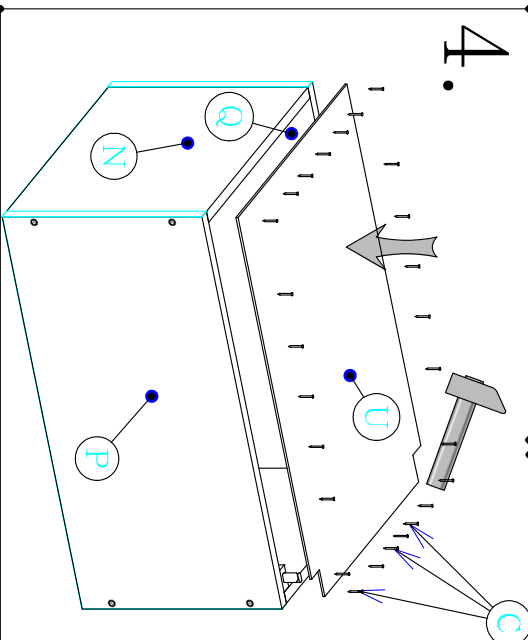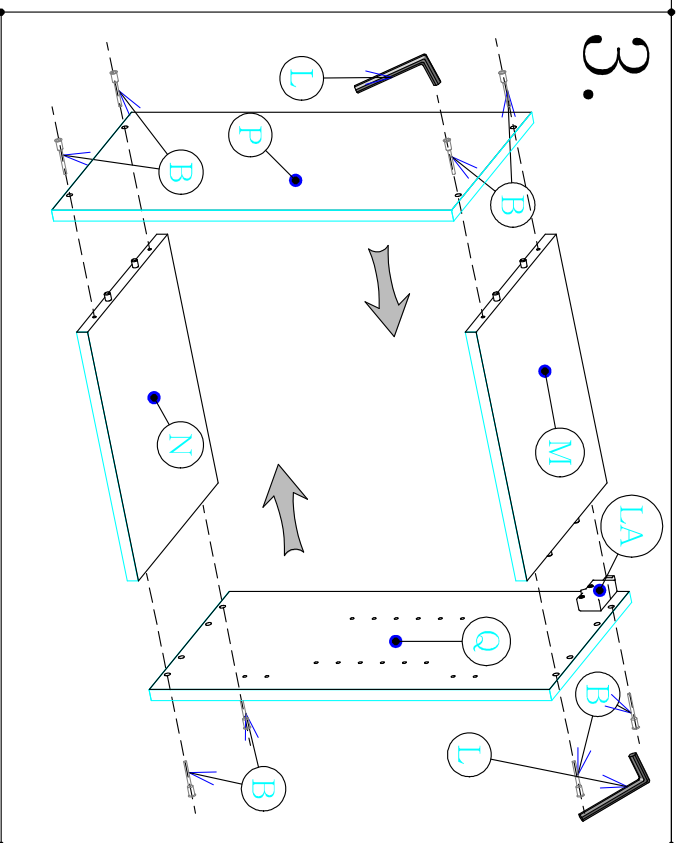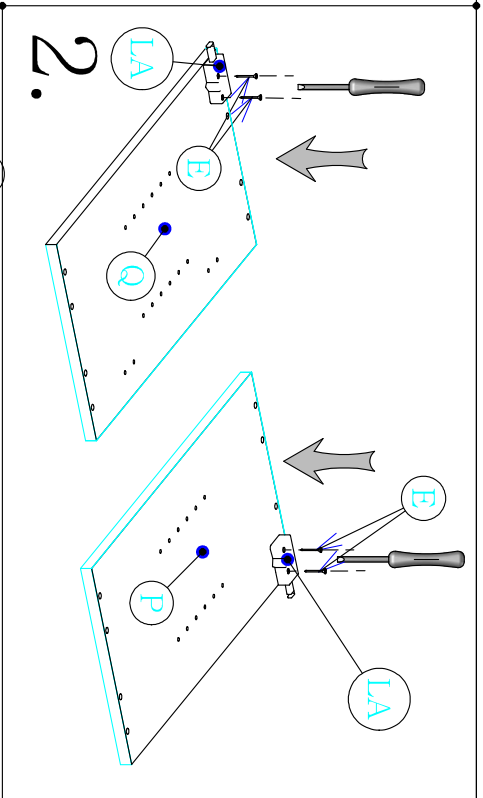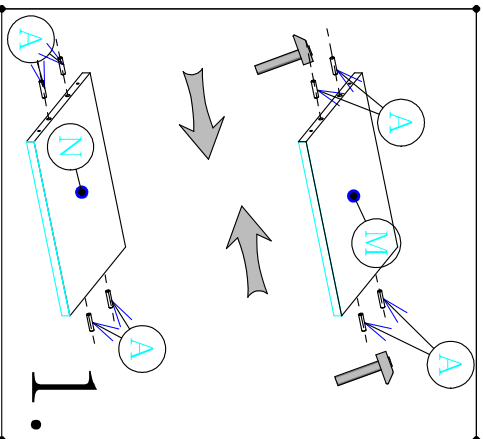

Assembly Instructions



1/1

G40

Alina

240cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps