

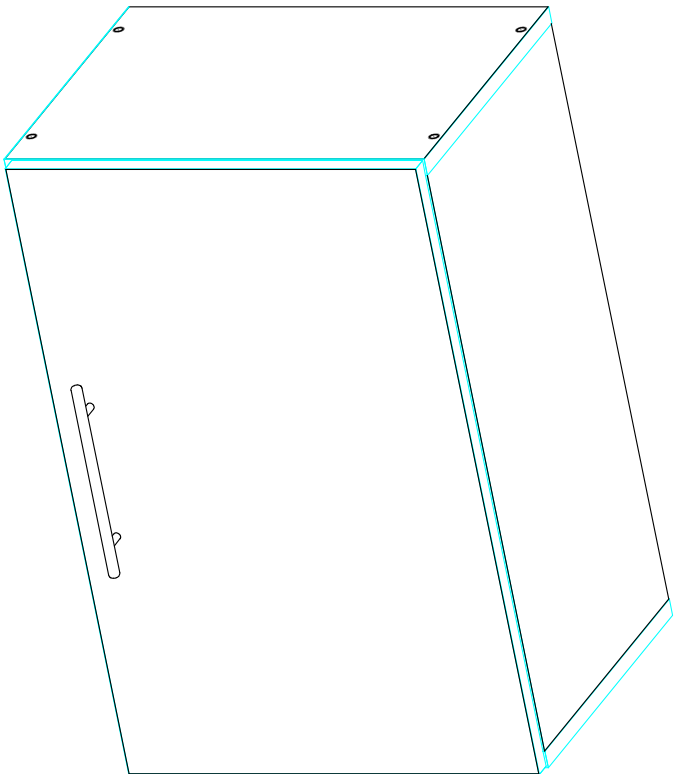
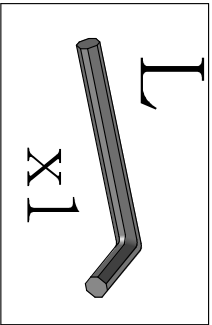
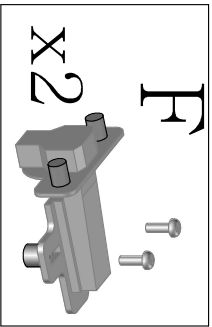
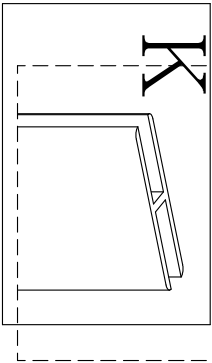
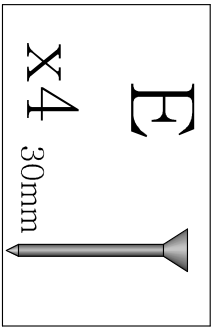
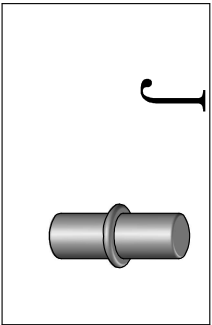
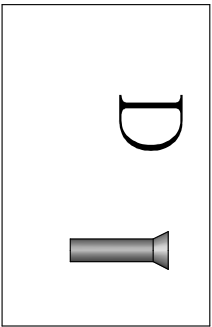
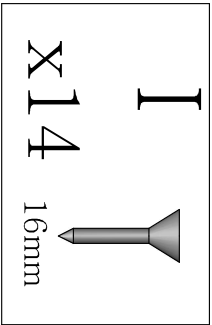
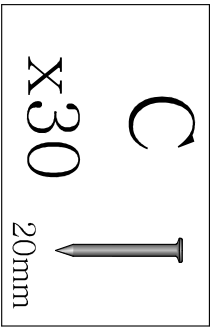
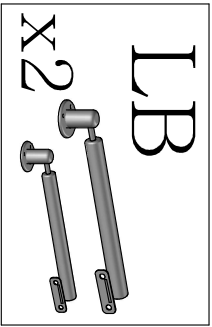
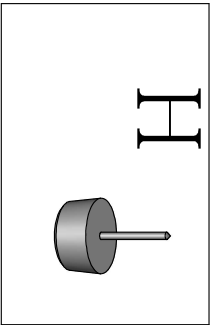
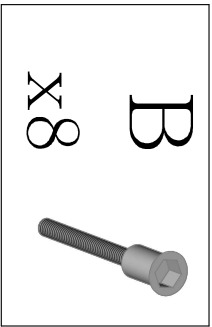
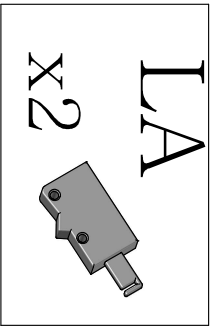


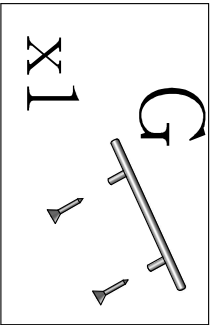

Assembly Instructions

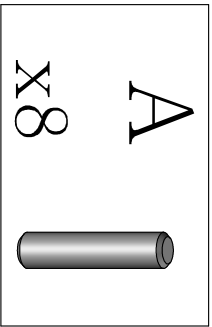

1/1

G600K







Alina I

240cm






External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

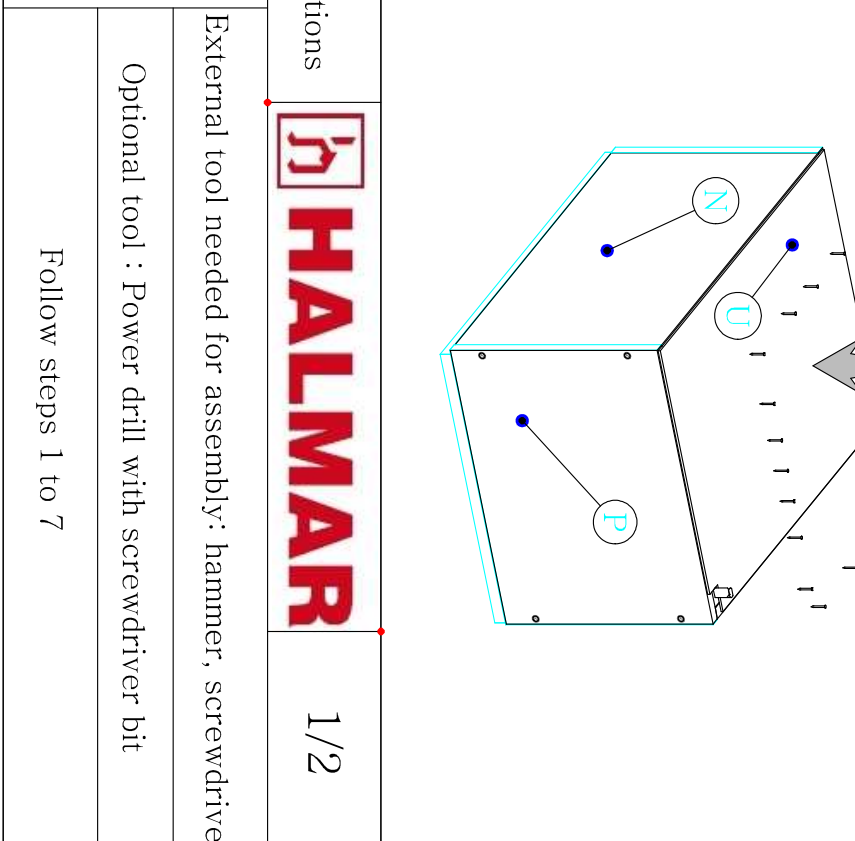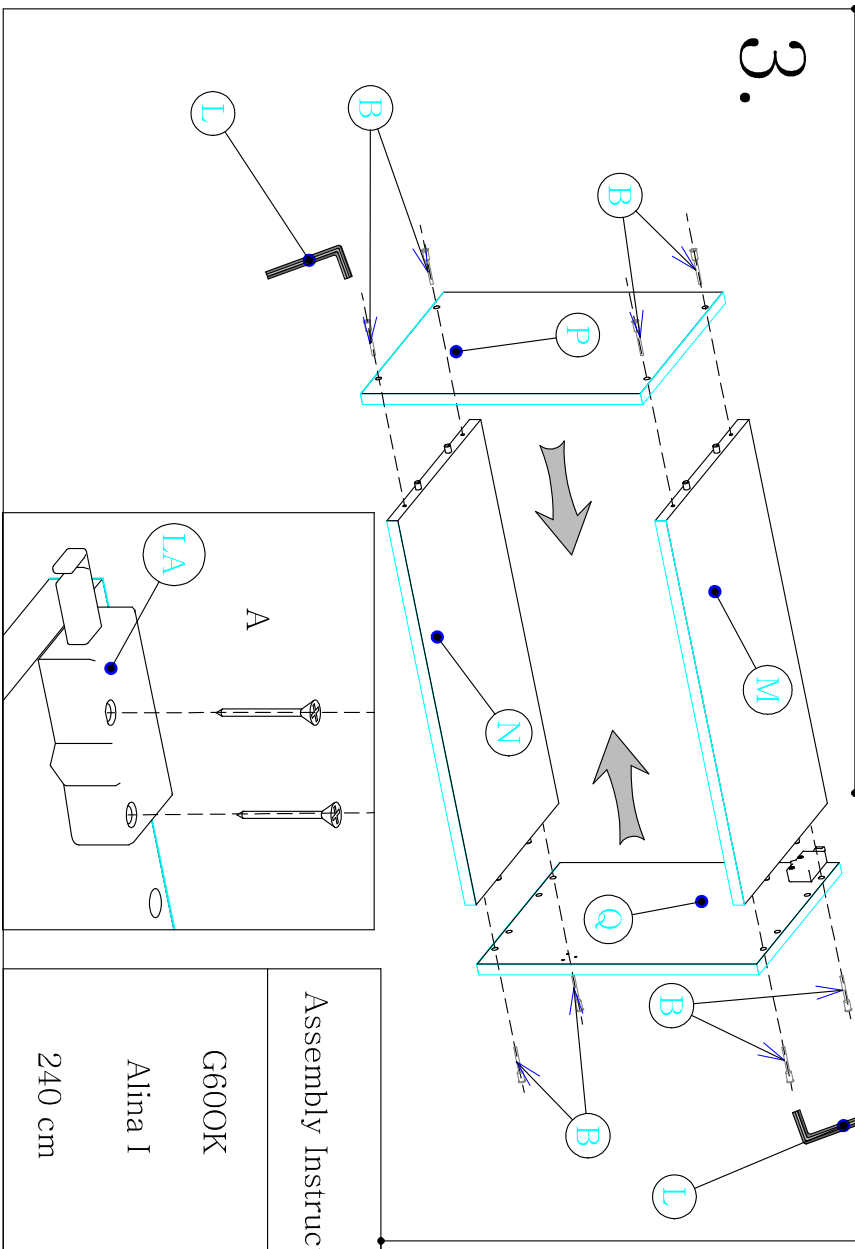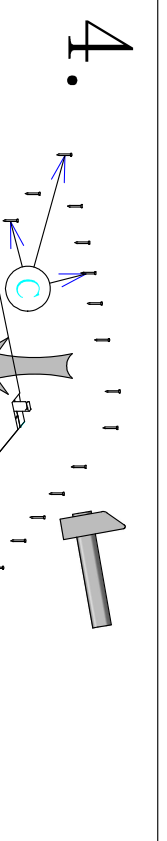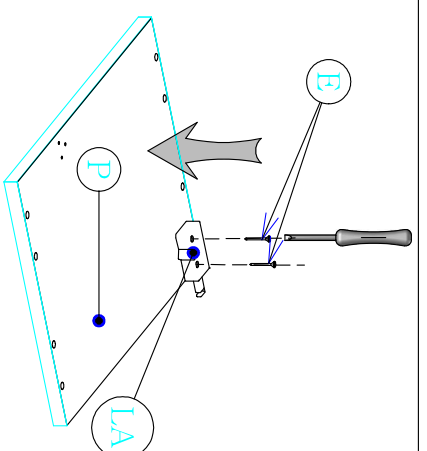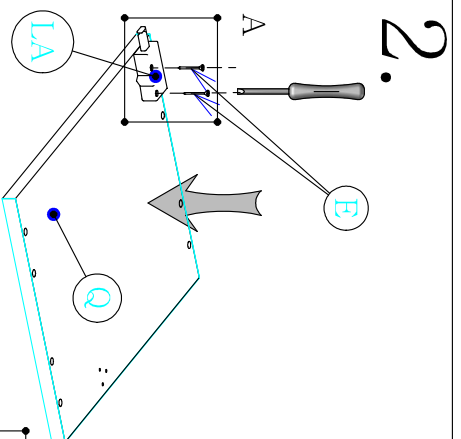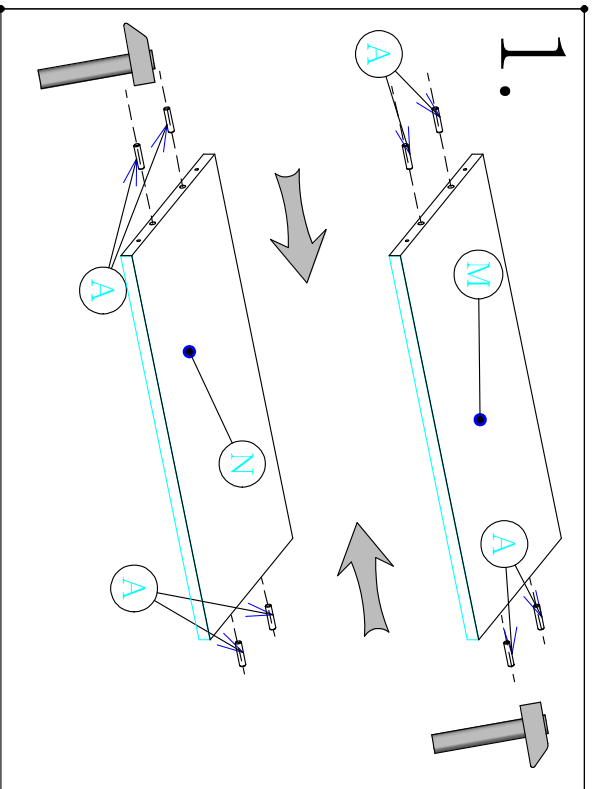

Assembly Instructions				1/2
G600K	External tool needed for assembly: hammer, screwdriver			
Alina I	Optional tool : Power drill with screwdriver bit			
240 cm	Follow steps 1 to 7			

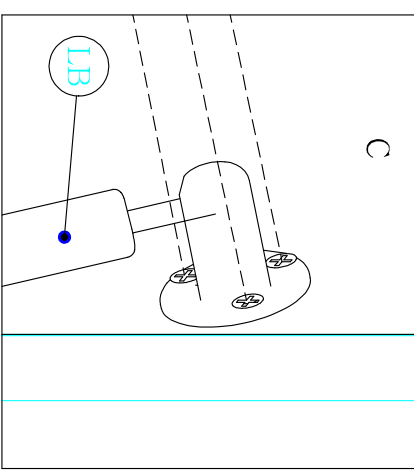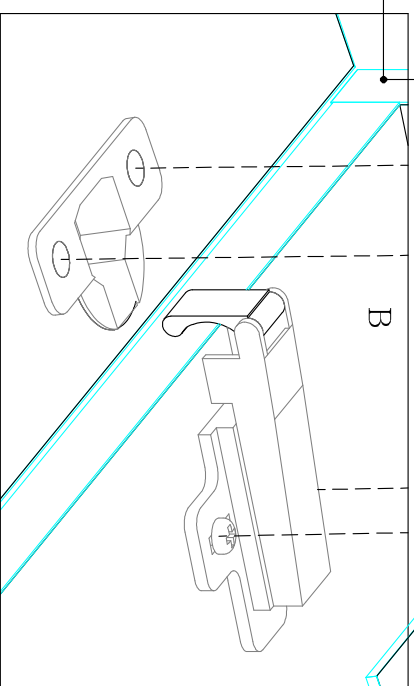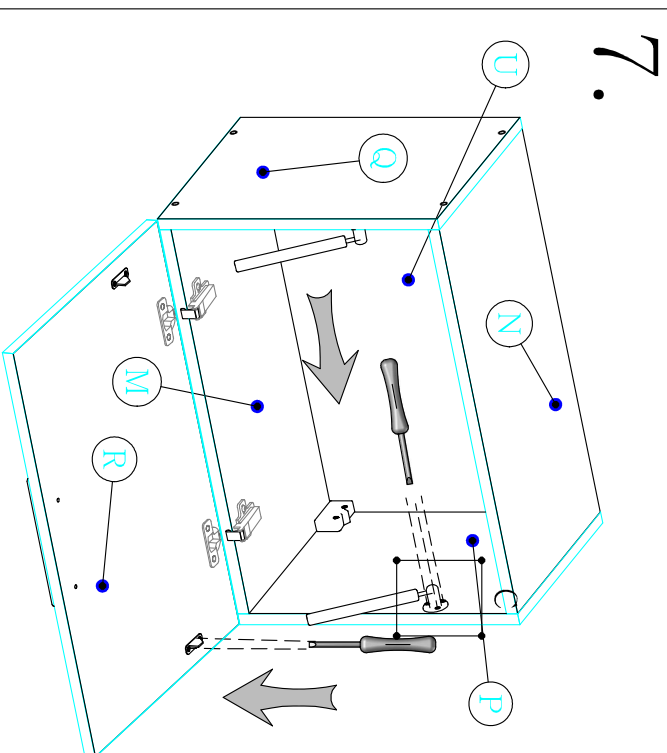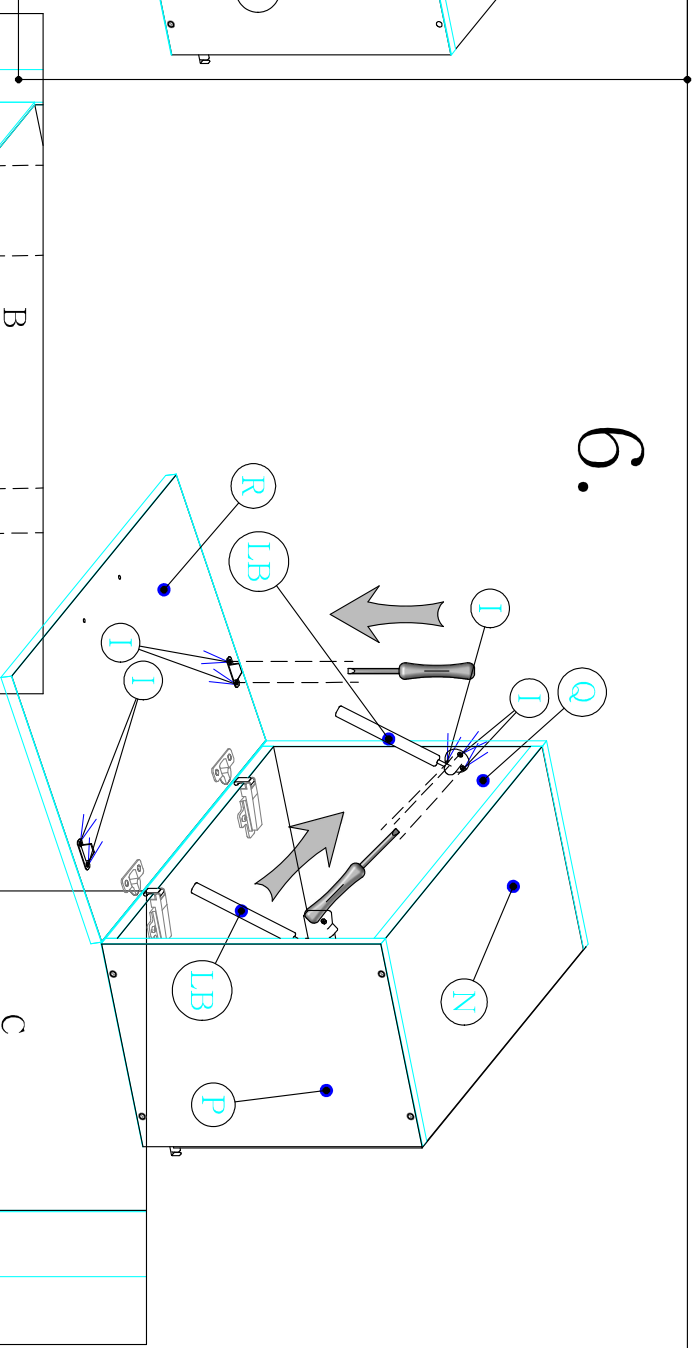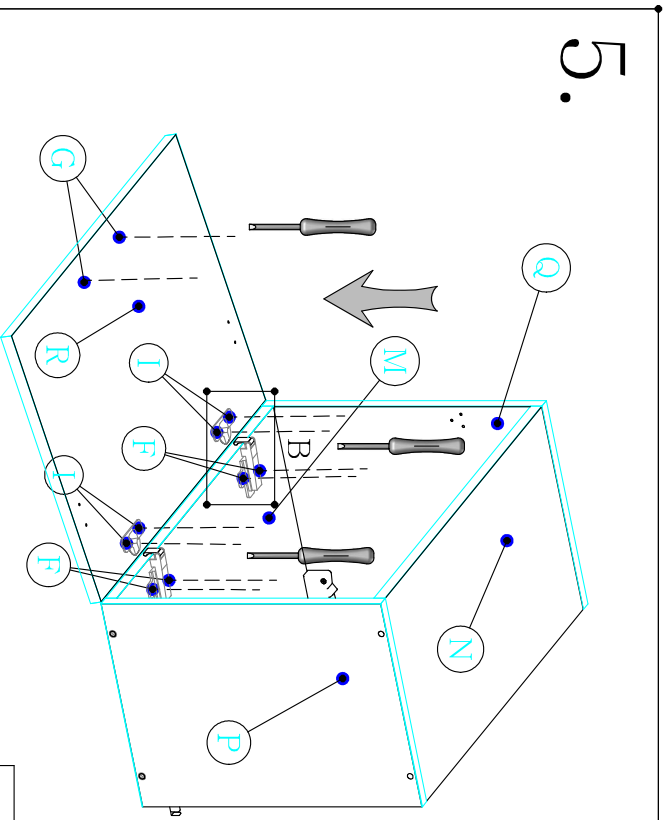

Assembly Instructions		 HALMAR		2/2
G600K	External tool needed for assembly: hammer, screwdriver			
Alina I	Optional tool : Power drill with screwdriver bit			
240 cm	Follow steps 1 to 7			