

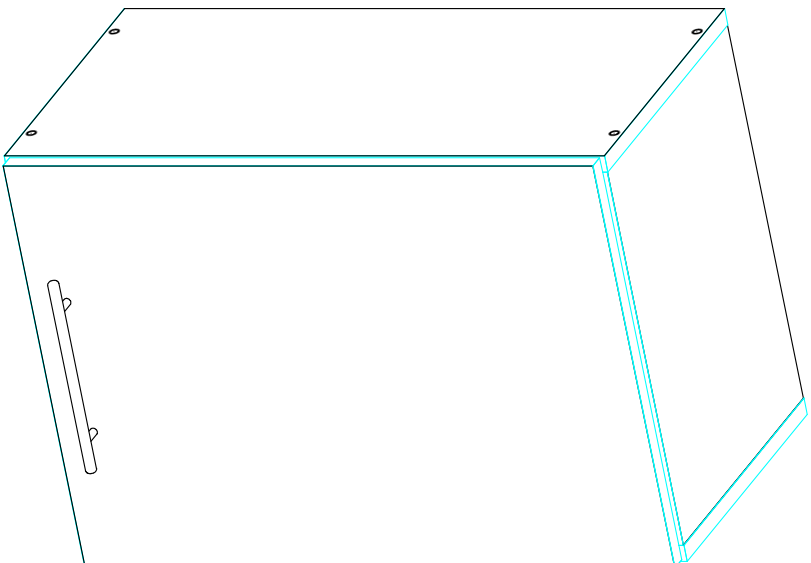
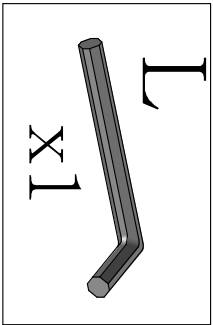
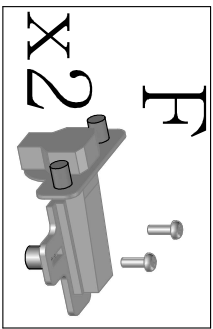
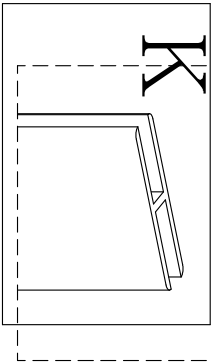
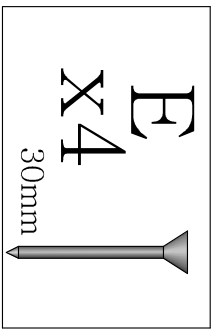
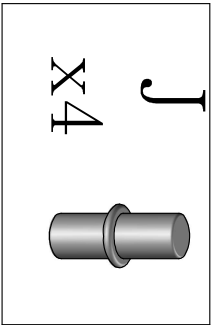
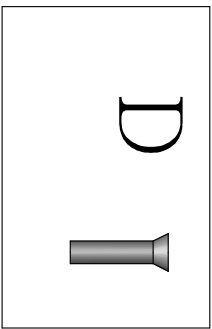
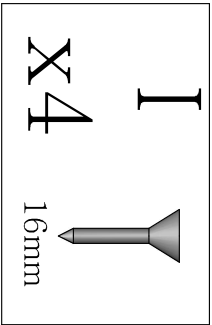
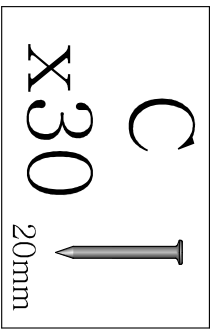
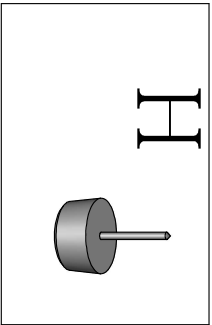
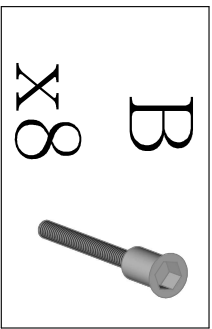
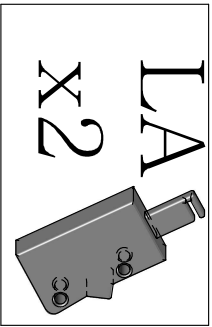


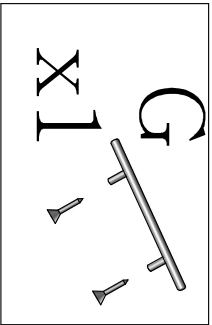

Assembly Instructions

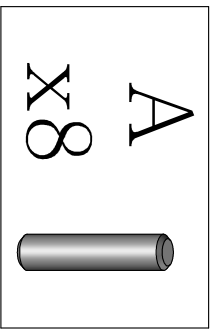

1/1

G60-P-








Alina I

240cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps

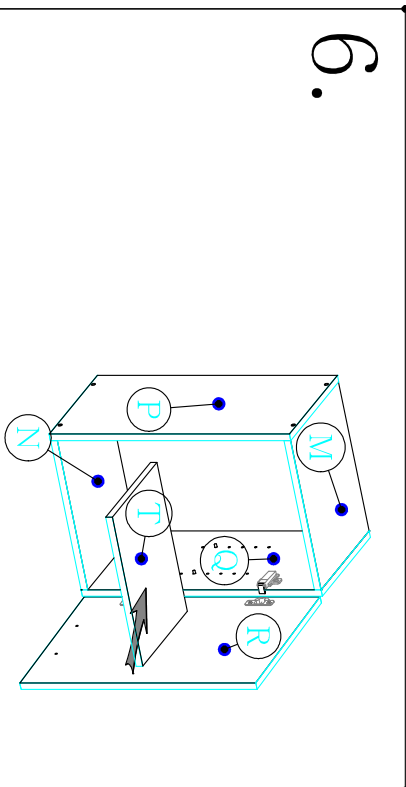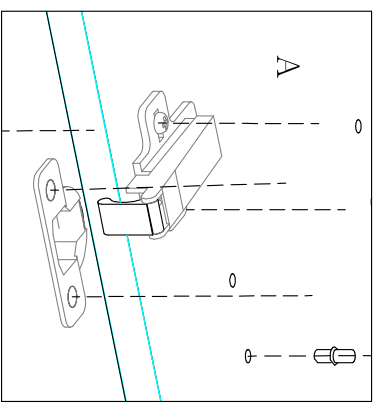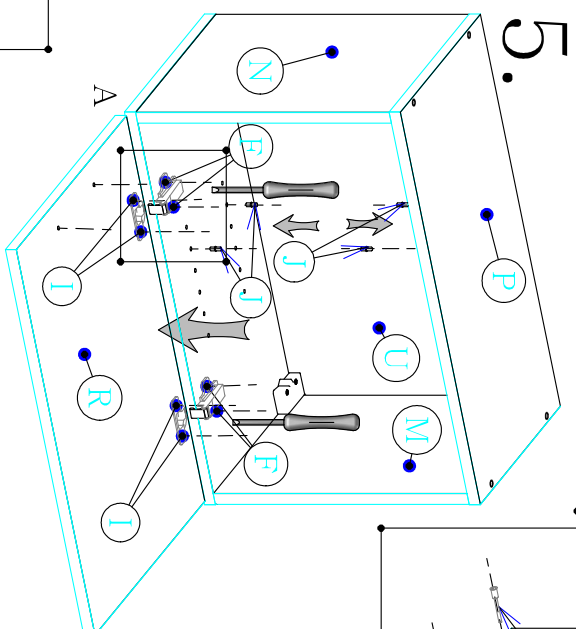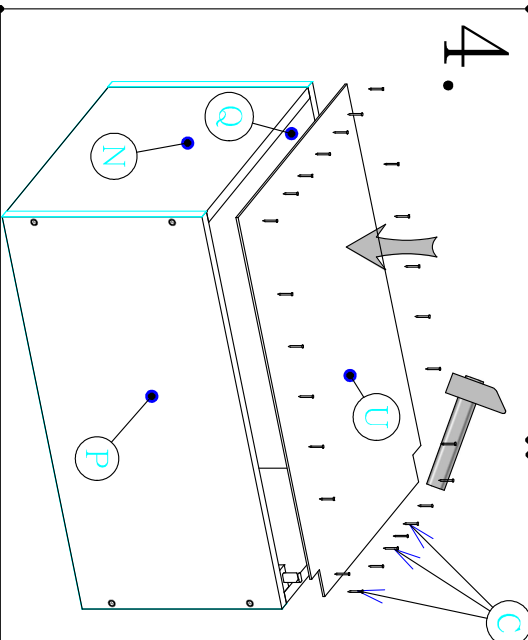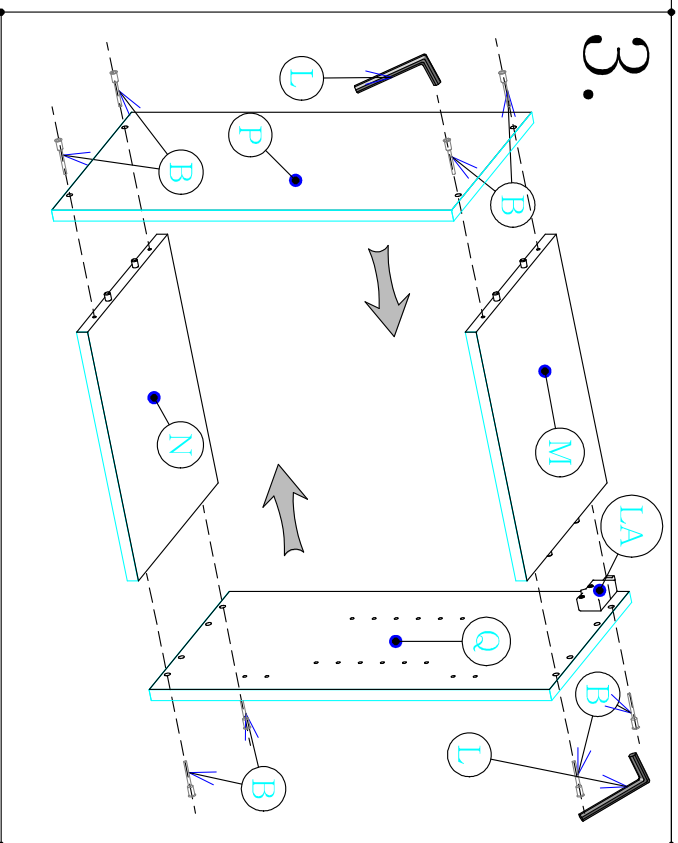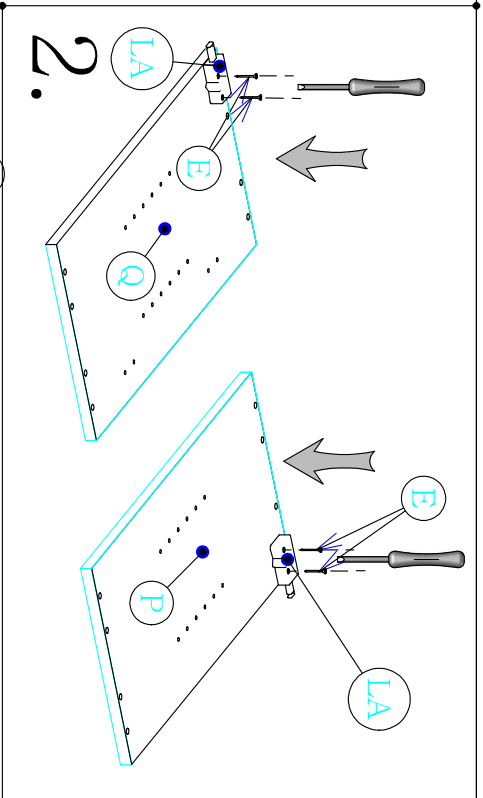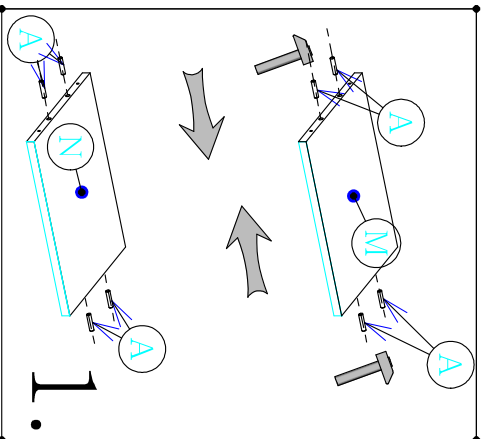

Assembly Instructions



1/1

G60-P

Alina

240cm

External tools needed for assembly: hammer, screwdriver

Optional tools :Power drill with screwdriver bit

Please follow steps